

Under Floor Heating Kit

Installation Guide

1. Clean the floor thoroughly. Cut a groove for the cold tail connection and begin to unroll the mat

Sizing Guide

Calculate the total, usable room floor area with allowance to avoid fixing furniture such as kitchen units and bathroom fittings with a 5% allowance for perimeter clearance.


Select the nearest size of mat below the usable area.

Example 1:

Free floor area of 5.5m² will require mat 12 810-165 covering 5.1m²

Example 2:

Free floor area of 21m² will require mat 12 2150 + mat 12 1200 providing 20.9m² coverage (3360 watts)

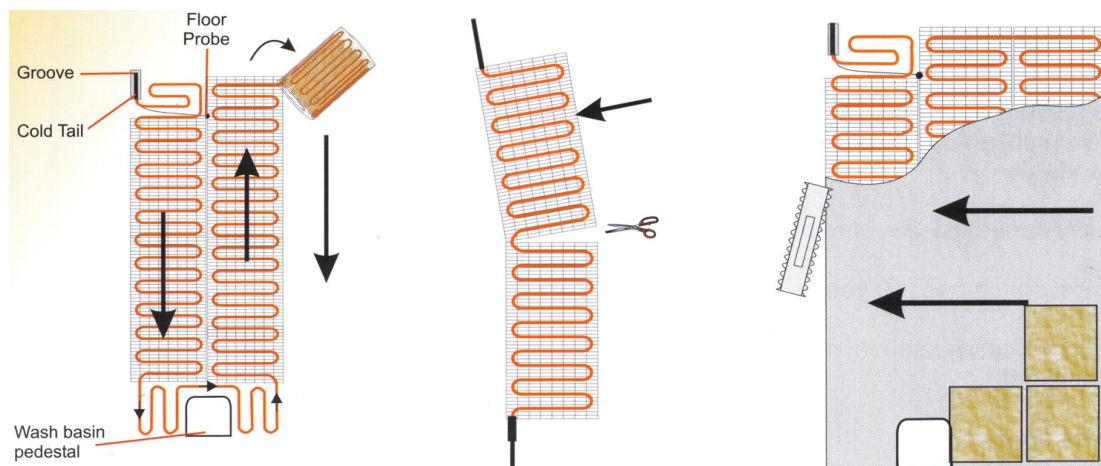


2. Mat can be cut to leave single wire free for making turns or for making sure there is heating cable in difficult to reach spots.


3. Never cut the cable, only the matting. Be careful not to twist or kink the cable when making turns.

4. When spreading the floor adhesive use the trowel in the same direction as the cable runs to avoid damaging the cable.

Concrete Floor

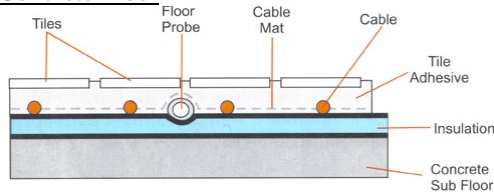

Timber Floor

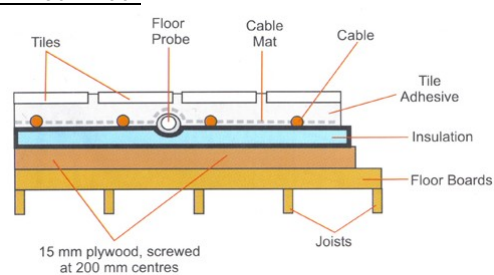

Real Oak Floors

www.RealOakFloors.co.uk

Unit 10 Penraevons Industrial Estate, Penraevons Street, Leeds, West Yorkshire, LS7 2AW

Tel: 08700 116 914

Fax: 0870 950 3019

Email: <mailto:sales@realoakfloors.co.uk>